



Replace display foil




Suitable aids are rounded Plastic tools such as credit cards and Microfiber gloves to avoid scratches.


Andres Industries AG
CEO: Dr. Björn Andres
Wattstr- 11-13
13355 Berlin
Germany
Tel.: +49 (0) 30 45 80 39 00
Fax: +49 (0) 30 45 80 39 03
Email: info@andres-industries.de
www.andres-industries.de

The waterproofness is no longer guaranteed after the display foil has been replaced independently.

- ① Remove the old foil from the frame and clean the adhesive surface with alcohol and a cotton swab and allow to dry briefly.

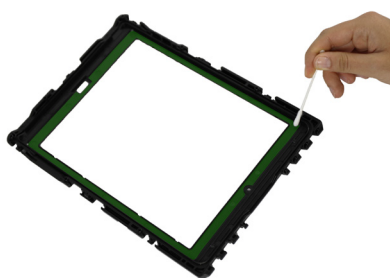

- ② Completely remove the adhesive frame from the clear carrier film and position it in the top shell.

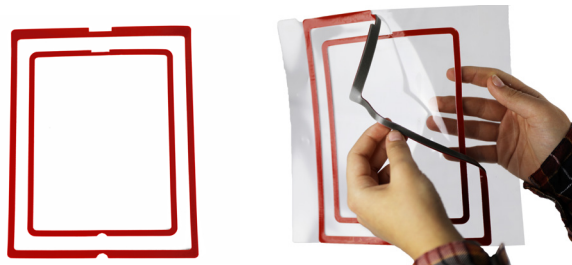

- ③ It is advisable to carefully adjust the corners and recesses first. Then align the rest of the adhesive frame and press on lightly.



- ④ If the adhesive frame is exactly in its position, it can be pressed down with a little more pressure. You can use dull plastic tools such as credit cards.



- ⑤ Remove the red protective film from the adhesive frame.



- ⑥ Then remove the protective film marked with a flag and carefully align the display film. Attach the film so that it does not slip and finally press it firmly from the centre to the corners on all sides. Make sure that no air ducts are created so that no water can penetrate into the housing.

