

# TigIR™

Installation of the TigIR™ replacement flap




Included in delivery:

- the pre-assembled flap
- one axle
- two pan-head screws with flange M3x6

1. If the old flap or parts of it are still on the housing, remove them.

### Required tools:

Torx 5 (To slide the axle into the recess provided for it.) Torx 7 for the pan-head screws

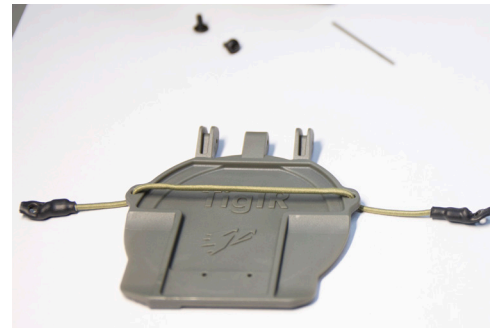

2. Make sure when installing the flap that the thickenings at the rubber eyelets point outwards.

3. The first step is to fix the flap with the axle.



4. When the axle is completely pushed into the provided recess, first fix the oval head screw on the side of the battery case.



5. Then fix the oval head screw on the other side of the TigIR.



Andres Industries AG

### Service & Support

Tel.: +49 30 4580 3900

Fax: +49 30 4580 3903

E-Mail: [info@andres-industries.de](mailto:info@andres-industries.de)

Web: [www.andres-industries.de](http://www.andres-industries.de)



Für TigIR™  
Stand 07.09.2020